


ScreenShare Guide

(Screenshare is only available on the HVC110 and HVC310)

The following guide will provide a step by step on how to use the ScreenShare application from AVer. The Screenshare application was designed to allow users to wirelessly share contents on the computer screen with other video conferencing systems.

1. Click the  icon to add an AVer HVC profile to your list.



2. Enter a Profile Title, IP Address of the HVC unit you are connecting with and VCLink password. Click the “OK” button to complete the Connection profile.




3. Highlight the AVer HVC Profile you want to connect with in the list and click “Log In” icon.



4. Bring up the image you want to share on your computer screen and click “Share” button to initiate the session. Click the “Stop” button to end the sharing process.



5. The shared desktop image will appear on the video conferencing screen.

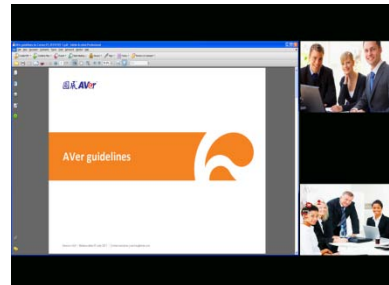

6. The “Log Out” icon will terminate the ScreenShare session.

