
 


TV

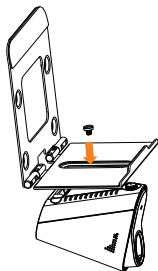


1. Fix the camera to the mount with a screwdriver or coin.




2. Fix the mount to your TV by first pressing the lip flush against the top of the TV (front). Now gently press the back of the mount against the back of the TV until it can support the weight of the camera.


Wall

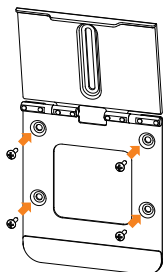


1. Fix the mount to the wall.

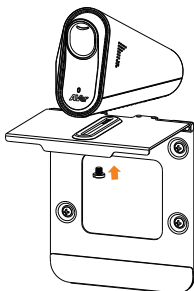


2. Fix the camera to the mount with a screwdriver or coin.

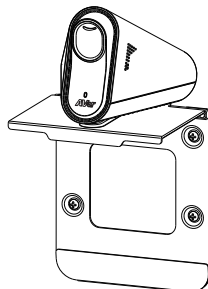


Ceiling

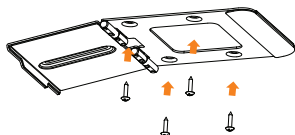

1. Fix the mount to the ceiling.

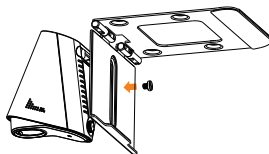

2. Fix the camera to the mount with a screwdriver or coin.

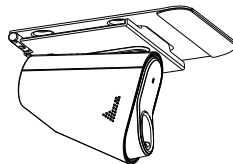

3. Now fold the mount so it is flat against the ceiling.