




# AVerVision F17+

## Quick Start Guide


(1)

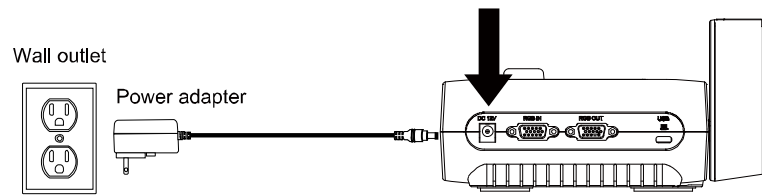


(2)

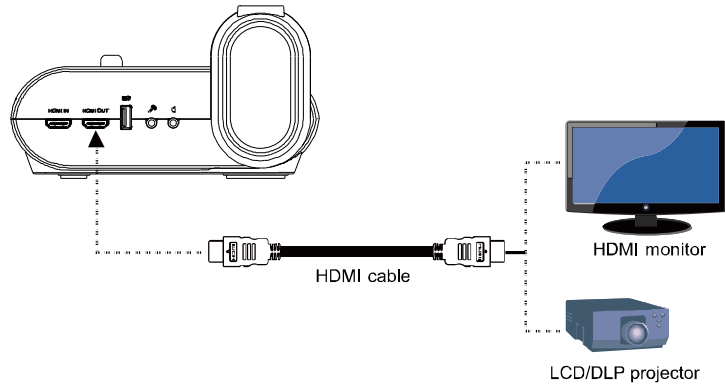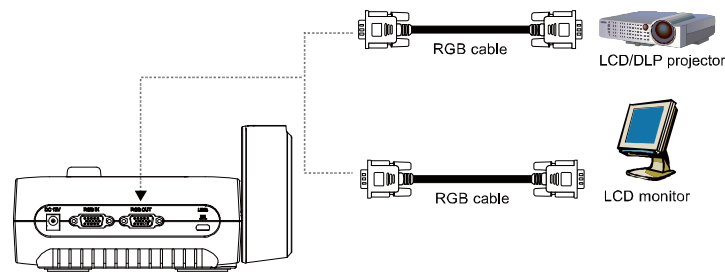

(3)

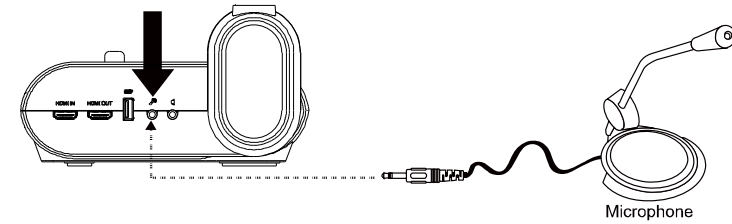

(4)

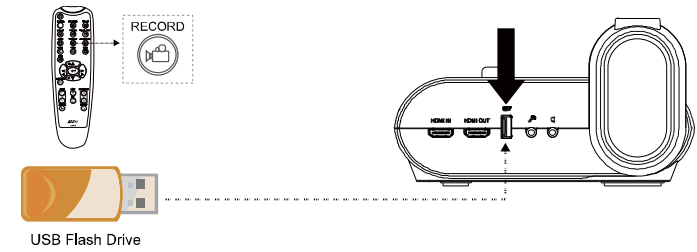



(5)

IMAGE	Language	3840x2160 @ 60
SETTING	Output Display	3840x2160 @ 30
SYSTEM	Backup	1920x1080 ✓
	Save Setting	1280x720
	Recall Setting	1024x768
	Flicker	
	Information	
	Default	

**Output Display**  
Set the resolution to display the image on screen.

## Remote Control and Control Panel

The remote control requires two (2) "AAA" size batteries (supplied); make sure batteries are installed properly before use. You can access all the features of AVerVision F17+ with the remote control.

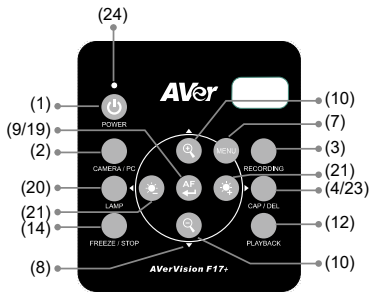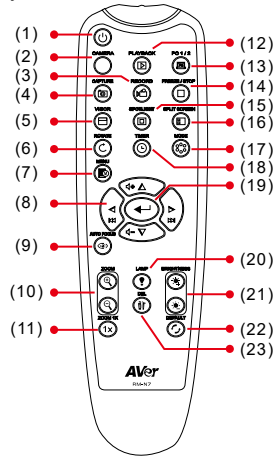

Name	Function
(1) POWER	Turn the unit on/standby.
(2) CAMERA	Camera mode displays the video signal from the built-in camera.
(3) RECORD	Start/Stop audio & video recording. Video recording can only be saved either in a SD memory card or a USB flash drive.
(4) CAPTURE	Capture still image in Camera mode. In continuous capture mode, press this button again to stop.
(5) VISOR	Not supported
(6) ROTATE	Rotate the image by 0/180° in Camera mode.
(7) MENU	Open and exit the OSD menu.
(8) ▲, ▼, ◀, ▶	<ul style="list-style-type: none"> <li>- Pan and zoom-in image (above digital zoom level) in live mode.</li> <li>- Select options in OSD menu.</li> <li>- Use ▲&amp;▼ to increase and decrease the video playback volume.</li> <li>- Use ◀&amp;▶ to play the video backward and forward.</li> </ul>
(9) AUTO FOCUS	Adjust the focus automatically.
(10) ZOOM +/-	Increase/decrease the image magnification in camera and picture playback mode.
(11) ZOOM 1X	Reset zoom level to 100%.
(12) PLAYBACK	View the captured picture/video from the memory in images.
(13) PC 1/2	PC mode displays the video signal from the RGB/HDMI INPUT port of F17+.
(14) FREEZE / STOP	<ul style="list-style-type: none"> <li>- Freeze live images.</li> <li>- Stop video playback.</li> </ul>
(15) SPOTLIGHT	Not supported
(16) SPLIT SCREEN	Not supported
(17) MODE	Press to switch between Normal (Microscope), Motion, and High quality.
(18) TIMER	Call the Timer submenu. Select to Start/Pause/Stop the timer countdown. Select Timer Interval to set the timer duration.
(19) ⏪	<ul style="list-style-type: none"> <li>- Make a selection in Playback mode and OSD menu.</li> <li>- Play/Pause video playback.</li> </ul>
(20) LAMP	Turn the overhead light on/off.
(21) BRIGHTNESS +/-	Adjust the brightness.
(22) DEFAULT	Reset to factory default setting.
(23) DEL	Delete the selected picture/video in Playback mode.
(24) Power LED INDICATOR	<ul style="list-style-type: none"> <li>- <b>Red:</b> Standby</li> <li>- <b>Green:</b> On</li> </ul>

For warranty information, please visit the link below.  
<https://communication.aver.com/warranty>

### WARNING:

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

### CAUTION:

Risk of Explosion if Battery is Replaced by an Incorrect Type. Dispose of Used Batteries According to the Instructions.

Refer to the following website for Taiwan RoHS information of our products:

限用物質含有情況標示資訊參考下列網址:

<https://tw.aver.com/page/RoHS>

### 警告使用者：

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾。

在這種情況下，使用者會被要求採取某些適當的對策。

遙控器電池安全資訊

- 請將電池存放在涼爽與乾燥的位置。

- 不要將電量用盡的電池棄置在家庭廢棄物中。

請將電池棄置在特定回收處，或送回原購買的商店。

- 如果長時間不使用電池，請將其取出。電池漏液與腐蝕

可能會損壞遙控器，請以安全方式棄置電池。

- 不可混用新舊電池。

- 不可混用不同類型的電池：鹼性、標準（碳鋅）或可

充電（鎳鎘）電池。

- 不可將電池棄置於火源中。

- 請勿嘗試讓電池端子短路。

### VCCI-A

この装置は、クラス A 機器です。この装置を住宅環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

### More Help

For FAQs, technical support, software and user manual download, please visit:

#### Headquarters

Download Center:

<https://www.aver.com/download-center>

Technical Support:

<https://www.aver.com/technical-support>

#### Europe Branch Office

Download Center:

<https://www.avereurope.com/download-center>

Technical Support:

<https://www.avereurope.com/technical-support>

### COPYRIGHT

© 2023 AVer Information Inc. All rights reserved. | February 22, 2023

The information contained in this documentation is subject to change without notice.

### CONTACT INFORMATION

#### Global

AVer Information Inc.

<https://www.aver.com>

8F, No.157, Da-An Rd.,

Tucheng Dist.,

New Taipei City 23673, Taiwan

Tel: +886 (2) 2269 8535

#### European Headquarters

AVer Information Europe B.V.

<https://www.avereurope.com>

Westblaak 134, 3012KM,

Rotterdam, The Netherlands

Tel: +31 (0) 10 7600 550

Technical support: [eu.rma@aver.com](mailto:eu.rma@aver.com)

#### Japan Branch Office

アバー・インフォメーション株式会社

<https://jp.aver.com>

〒160-0023 日本東京都新宿区西新宿 3-2-26 立

花新宿ビル 7 階

Tel: +81 (0) 3 5989 0290

テクニカル・サポート: [Support.EDU.JP@aver.com](mailto:Support.EDU.JP@aver.com)

#### Vietnam Branch Office

Công ty TNHH AVer Information (Việt Nam)

<https://www.aver.com>

Tầng 5, 596 Nguyễn Đình Chiểu, P.3, Quận 3,

Thành phố Hồ Chí Minh 700000, Việt Nam

Tel: +84 (0) 28 22 539 211