



AVerVision F50+

Quick Start Guide


(1)

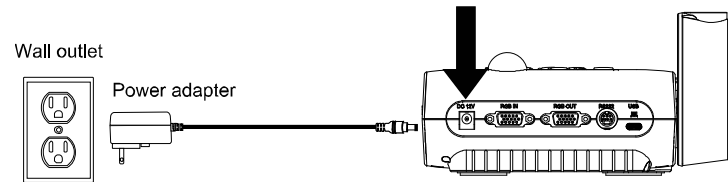


(2)

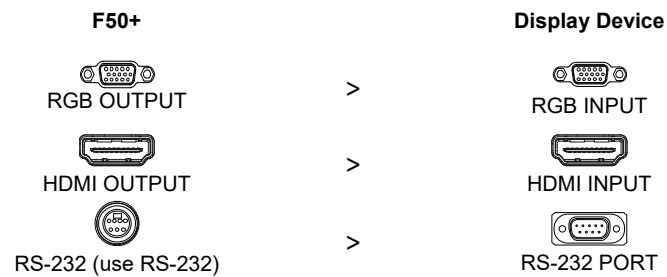


(3-A)

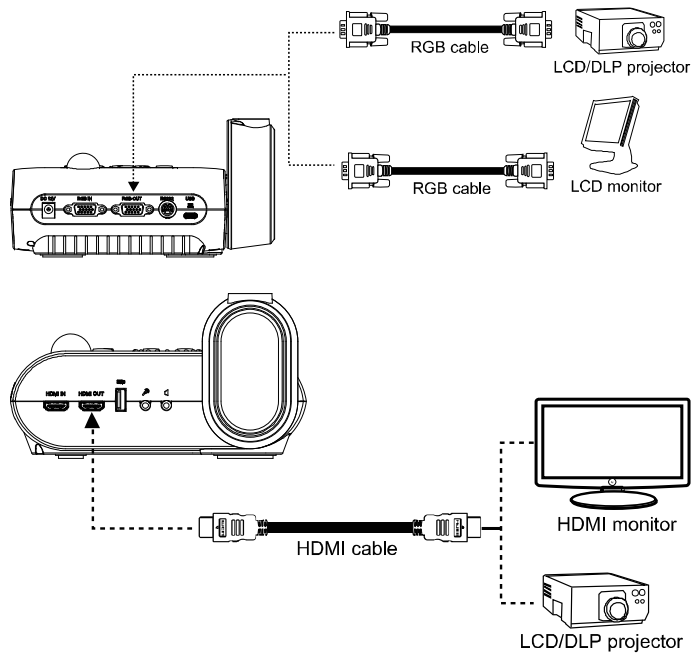


(3-B)

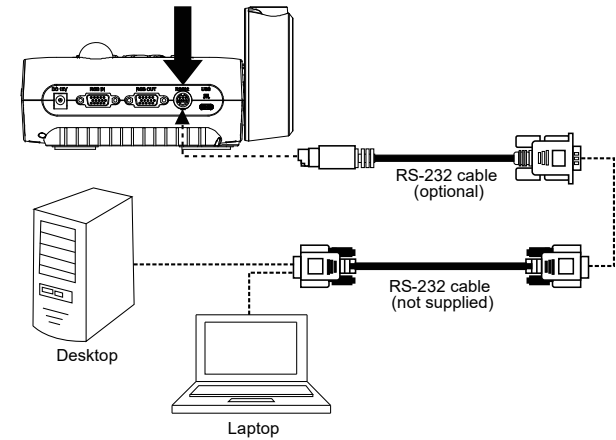

(4)

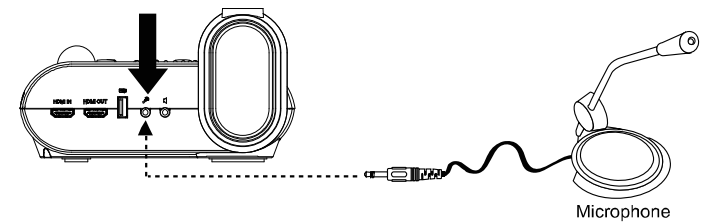

(5)

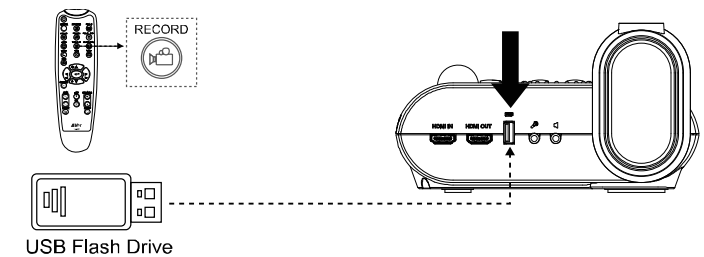

(6)

IMAGE	Language	3840x2160 @ 60
SETTING	Output Display	3840x2160 @ 30
SYSTEM	Backup	1920x1080 ✓
	Save Setting	1280x720
	Recall Setting	1024x768
	Flicker	
	Information	
	Default	

Output Display

Set the resolution to display the image on screen.

Remote Control and Control Panel

	Name	Function
(1)	(1) POWER	Turn the unit on/standby.
(2)	(2) CAMERA	Camera mode displays the video signal from the built-in camera.
(3)	(3) RECORD	Start/Stop audio & video recording. Video recording can only be saved either in a SD memory card or a USB flash drive.
(4)	(4) CAPTURE	Capture still image in Camera mode. In continuous capture mode, press this button again to stop.
(5)	(5) VISOR	N/A
(6)	(6) ROTATE	Rotate the image by 0/180° in Camera mode.
(7)	(7) MENU	Open and exit the OSD menu.
(8)	(8) ▲, ▼, ◀, & ▶	<ul style="list-style-type: none"> - Pan and zoom-in image (above digital zoom level) in both live and playback mode. - Select options in OSD menu. - Select options in OSD menu. - Use ▲&▼ to increase and decrease the video playback volume. - Use ◀&▶ to play the video backward and forward.
(9)	(9) AUTO FOCUS	Adjust the focus automatically.
(10)	(10) ZOOM +/-	Increase/decrease the image magnification in camera and picture playback mode.
(11)	(11) ZOOM 1X	Reset zoom level to 100%.
(12)	(12) PLAYBACK	View the captured picture/video from the memory in 16-thumbnail images.
(13)	(13) PC 1/2	PC mode displays the video signal from the RGB/HDMI INPUT port of F50+.
(14)	(14) FREEZE / STOP	<ul style="list-style-type: none"> - Freeze live images. - Stop video playback.
(15)	(15) SPOTLIGHT	N/A
(16)	(16) SPLIT SCREEN	N/A
(17)	(17) MODE	Press to switch between Normal, Motion, High quality, Microscope, Infinity, and Marco mode.
(18)	(18) TIMER	Start/Pause/Stop the timer countdown and set the timer duration.
(19)	(19) ◀	<ul style="list-style-type: none"> - Make a selection in Playback mode and OSD menu. - Play/Pause video playback
(20)	(20) LAMP	Turn the overhead light on/off.
(21)	(21) BRIGHTNESS +/-	Adjust the brightness.
(22)	(22) DEFAULT	Reset at factory default setting.
(23)	(23) DEL	Delete the selected picture/video in Playback mode.

Federal Communication Commission Interference Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radiofrequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules.

The Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This Class A digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

Warning

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Caution

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

警告

為避免電磁干擾，本產品不應安裝或使用於住宅環境。

COPYRIGHT

©2023 AVer Information Inc. All rights reserved. | December 21, 2023

The information contained in this documentation is subject to change without notice.

Contact Information

Headquarters

AVer Information Inc.
<https://www.aver.com>
 8F, No.157, Da-An Rd.
 Tucheng Dist., New Taipei City
 Taiwan
 Tel: +886 (2) 2269 8535

USA Branch Office

AVer Information Inc.
<https://www.averusa.com>
 668 Mission Ct.
 Fremont, CA 94539, USA
 Tel: +1 (408) 263 3828
 Toll-free: +1 (877) 528 7824
 Technical support:
support.usa@aver.com

Europe Branch Office

AVer Information Europe B.V.
<https://www.aver-europe.com>
 Westblaak 134, 3012KM,
 Rotterdam, The Netherlands
 Tel: +31 (0) 10 7600 550
 Technical support:
eu.rma@aver.com

Japan Branch Office

アバー・インフォメーション株式会社
<https://jp.aver.com>
 〒160-0023 日本東京都新宿区
 西新宿 3-2-26 立花新宿ビル 7 階
 Tel: +81 (0) 3 5989 0290
 テクニカル・サポート:
<https://jp.aver.com/technical-support>

Vietnam Branch Office

Công ty TNHH AVer Information
 (Việt Nam)
 Tầng 5, 596 Nguyễn Đình
 Chiểu, P.3, Quận 3, Thành phố
 Hồ Chí Minh 700000, Việt Nam
 Tel: +84 (0)28 22 539 211