


# UV Lamp Installation

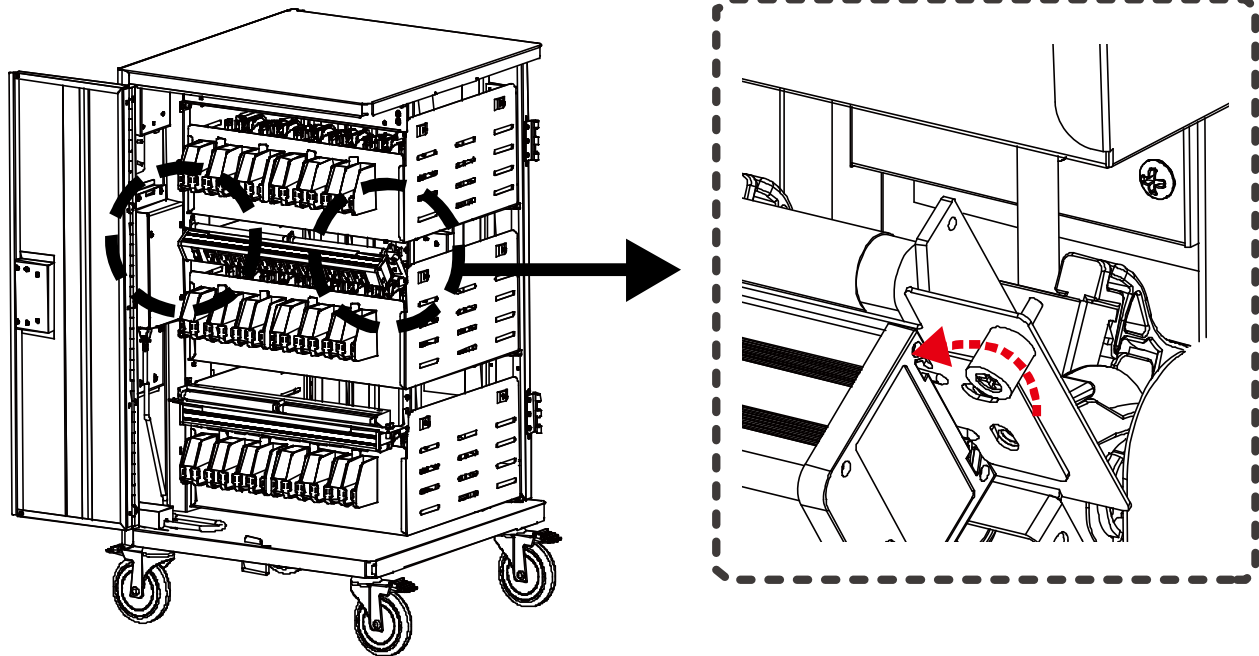

1. Set the power switch to the OFF position. Unplug the power cord.
2. Open the rear door and find the lamp holders above the drawer.
3. Find the UV lamps in the package.
4. Loosen screws of both sides of lamp holders and rotate the lamp holders down 90°.
5. Install the UV lamps on lamp holders and rotate the UV lamps 90° until you hear a click sound.
6. Push the lamp holders back and tighten the screws.
7. Plug the power cord. Set the power switch to the ON position.

## [Warning]

- DO NOT open the rear door when UV-C lights are on and sanitization is in progress.
- Before starting the sanitizing process, please make sure the rear door is closed. We strongly recommend you to lock the rear door after you install the power adapters.