

AVerVision CP150 Quick Reference Guide

Capturing an Image

- Place object inline with camera head
- Press CAP/DEL button (on remote or on control panel)
- Image is now captured!

Capture Images Continuously

- Press MENU
- Select CAPTURE
- Select CONTINUOUS CAPTURE
- Select desired interval (5-600 seconds)
- Press CAP/DEL to begin capturing
- Press CAP/DEL to stop

* In order to capture images singly once again, doc cam must be set to single image capture.
(Menu => Capture => Single)

Transfer Captured Images to PC

- Ensure USB cable is **disconnected**
- Press MENU and select SETTINGS
- Select USB CONNECTION
- Select IMG DOWNLOAD and press ENTER
Press MENU to close on-screen display
- Connect USB cable to computer
- Computer system will automatically detect the new removable disk. (similar to a flash/thumb drive)


Zoom Using Shuttle Wheel

- Turn Shuttle wheel clockwise to zoom in and counter-clockwise to zoom out
- Zoom max is 1600%
- Press ENTER to return to normal view (100%)

Presenter

- This button allows user to access: AVerBox and AVerVisor feature. *AVerBox overlays a frame on the presentation screen. This can be used to emphasize detail. AVerVisor covers part of the presentation screen. This can be used to "hide" a portion of the document.*

Control Panel

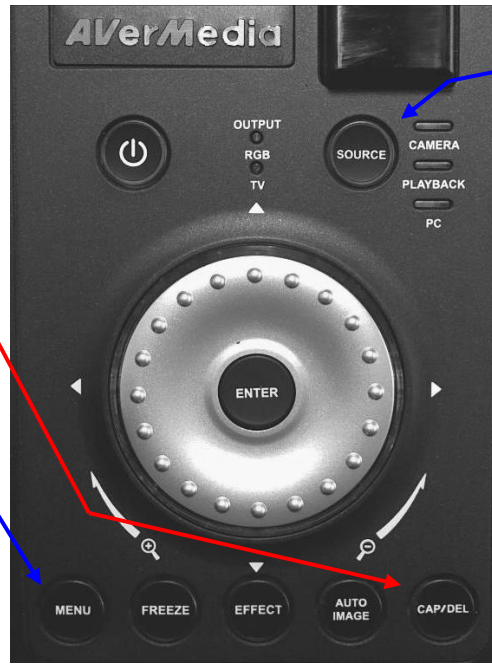

Remote Control



View Captured Images

- Press SOURCE button until LED light indicates PLAYBACK
- Screen will display images as thumbnails
- Move to desired image by using arrow keys
- To enlarge image to full screen, press ENTER
- To return to screen with images as thumbnails, press ENTER
- To return back to document camera mode, press SOURCE until CAMERA mode is indicated

Deleting Captured Images

- Access PLAYBACK by pressing SOURCE
- Select desired image with arrow keys
- Press CAP/DEL
- Select YES

Delete all images at Once

- Press MENU button
- Select SETTINGS
- Select FORMAT MEMORY
- Select YES
- Memory reformats in \approx 20 seconds

Other Helpful Reminders

- To focus, dial focus ring located around lens until image clarity is achieved
- Zoom > 100% to use Pan Feature
- Use FREEZE function for smooth transitions
- If using doc cam with S-video or composite connection, set output to TV (Small black switch next to flex arm)
- When experiencing glare, try angling LED light module or using the included anti-glare sheet
- Turn off document camera by pressing and holding POWER button for 2 seconds
- Use AUTO IMAGE function to automatically adjust and set the white balance and exposure setting

AVerMedia

SK 07/21/08