

AVer PTZ310N/PTZ330N and TR311HN/TR3xxNV2 Camera

Integration with TriCaster and NDI

(February 2022)

Steps to integrate the PTZ and New TR Cameras with NewTek TriCaster and NDI

AVer Pro-AV has high quality image Cameras (PTZ310/330/N and TR311HN/TR3xxNV2) that will integrate with NewTek video workflows for peak performance and ease of use. We will show how to configure these cameras with the NewTek TriCaster platform, focusing on the NDI (Network Device Interface) video protocol; the AVer PTZ310N/330N and TR311HN/TR3xxNV2 cameras support the NDI protocol.

NewTek systems are used worldwide by broadcasters, sports leagues and teams, educators, houses of worship, live event producers, web-based talk shows, and more than 80% of the U.S Fortune 100. They have IP video workflows with the NewTek IP Series and NDI. You can go to <https://www.ndi.tv/> to learn more about NDI or download the NDI Virtual Tools application if needed.

NDI Minimum System Hardware Requirements:

- 64-bit Microsoft® Windows 7 operating system (OS) or better
- Intel i3 or i5 (2.8GHz) Sandy Bridge CPU (Quad/Six core) or better with integrated GPU (NVIDIA discrete GPU, with 2GB video memory or better recommended)
- 8GB system memory, minimum
- Gigabit connection or better
- Display with screen resolution of 1024 x 768 or higher *Faster CPU recommended to support more video streams or higher resolutions*


Overview of NDI use with AVer PTZ and TR Cameras

NDI offers several options to broadcast, connect, stream, view, video over 1Gbit/s IP networks. NewTek offers (for free) **NDI 5 Tools** which has 4 main functions for use with AVer cameras, they are:


- NDI Studio Monitor



- NDI Virtual Input (V4) or Webcam Input (V5)



- NDI Access Manager (Routing Control)

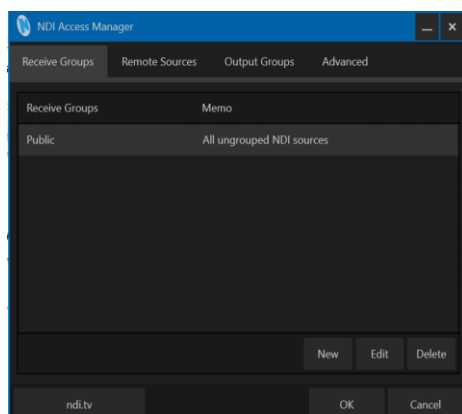

- NDI PTZ Camera control from Studio Monitor



We will not go into the installation or overview of each individual component of the NDI 5 Tools software; instead, we will cover each as needed while integrating with the TriCaster.

NDI Bandwidth

The following table is intended as a guide for calculating bandwidth needs based on video resolutions and frame rates. Each reference stream includes 16 channels of audio.

***Note:** Information provided by NewTek NDI Technical brief.

Example NDI video stream	Approximate bandwidth required
1 x UHDp60 video stream	250 Mbps
1 x UHDp30 video stream	200 Mbps
1 x 1080p60 video stream	125 Mbps
1 x 1080i60 video stream	100 Mbps
1 x 720p60 video stream	90 Mbps
1 x SD video stream	20 Mbps


Table 1. Bandwidth Requirements. The approximate bandwidth required per NDI video stream for common video resolutions and frame rates.

AVer PTZ310N/330N Camera Overview

The AVer PTZ330N NDI PTZ Live Streaming Camera is the latest camera with NewTek NDI® integrated. It combines both standard SDI and HDMI connections as well as Ethernet/NDI network connectivity for HD video streaming, recording, and broadcasting. The PTZ330N can output HD video and audio while receiving control signal and power over a single connection.



Overview

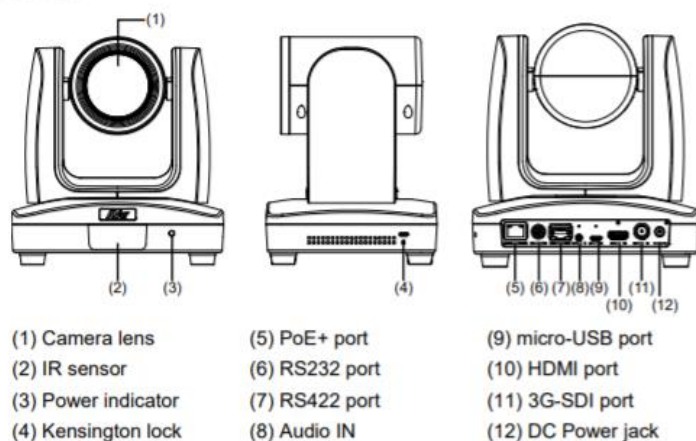

AVer PTZ310N/330N Camera Video Mode

Before proceeding, we need to verify that the PTZ310N/330N camera is setup for NDI, if not; there will be no NDI output.

There are (2) ways to do this:

- HDMI Output of the camera
- WebUI of the camera

HDMI

1. Connect the HDMI output of the camera to a monitor and use the camera remote to enable the OSD (On Screen display), then navigate to the System→NDI→ setting and verify it is set to ON.

***Note:** The cameras from the factory come with NDI enabled, but this may change in future production models.



2. If it is set to OFF, select ON, the camera will need to reboot.


***Note:** When the camera is in NDI mode, the USB video output is disabled.

AVer PTZ310N/330N Camera Video Mode (continued)

WebUI

1. The **Default IP** address is 192.168.1.168. You can change this using the HDMI output OSD, selecting the Network setting.
2. Use a Chrome Browser to access the WebUI of the camera.
3. The **Default** Username/Password is: admin / admin
4. The login credentials will need to be changed, carefully write down the NEW credentials.
5. Login to the WebUI of the camera with the NEW credentials.
6. Once logged in, go to the “Video & Audio” settings, verify that “Video Mode” has the “NDI” radio button selected.

***Note:** The camera will need to re-boot when changing to/from NDI video mode.

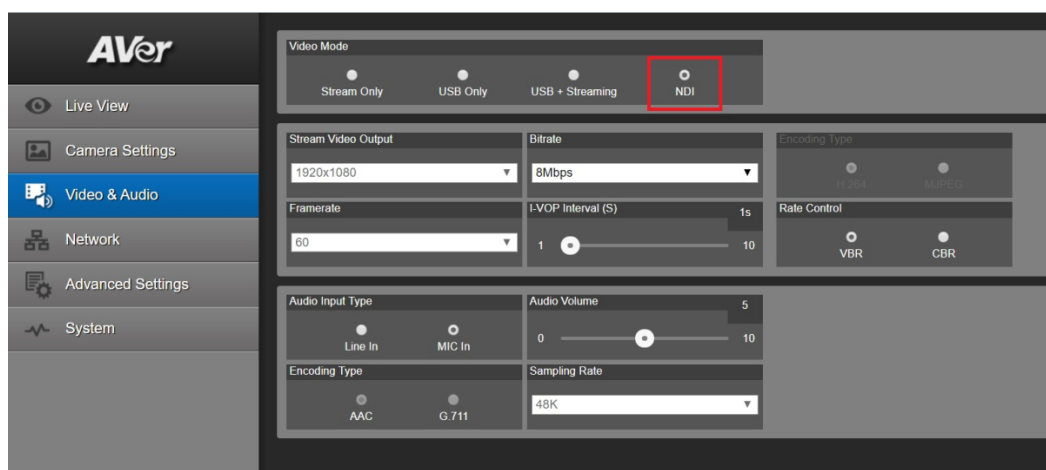


***Note:** The STREAM Video Output, Framerate, encoding type, and Sampling Rate settings are only for viewing, they are not adjustable in NDI mode. The NDI native video resolution is 1920x1080 /60P. The PTZ Camera will have an SDI/HDMI output in ALL modes.


Video Standard -->	Stream Only (Various)	USB Only (Various)	USB + Streaming (Various)	NDI (1080p/60)
SDI Output	✓	✓	✓	✓
HDMI Output	✓	✓	✓	✓
USB Output	✗	✓	✓	✗
RTSP Output	✓	✗	✓	✓

AVer PTZ310N/330N Camera Video Mode (continued)

7. The Rate Control setting should be set to CBR, there have been better results seen using this option.

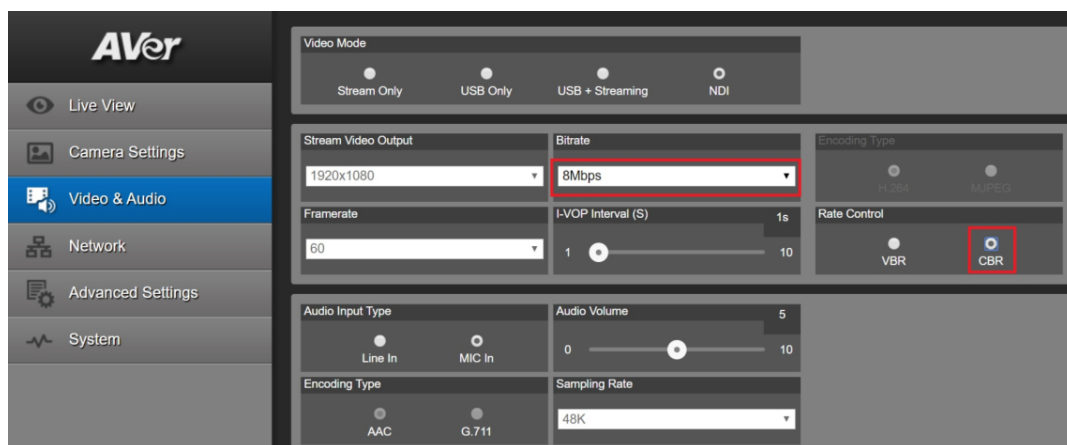

8. Setting the Bitrate to 8Mbps is also recommended, but you may see different results based on your network with other settings.
9. In the *System* page you can set the identity name *Camera ID (NDI)* for display on the NDI interface. After choosing your name press “Set” to make the change. ***Note:** A reboot of the camera is necessary for the name change. The firmware version can also be verified from the *System* page.

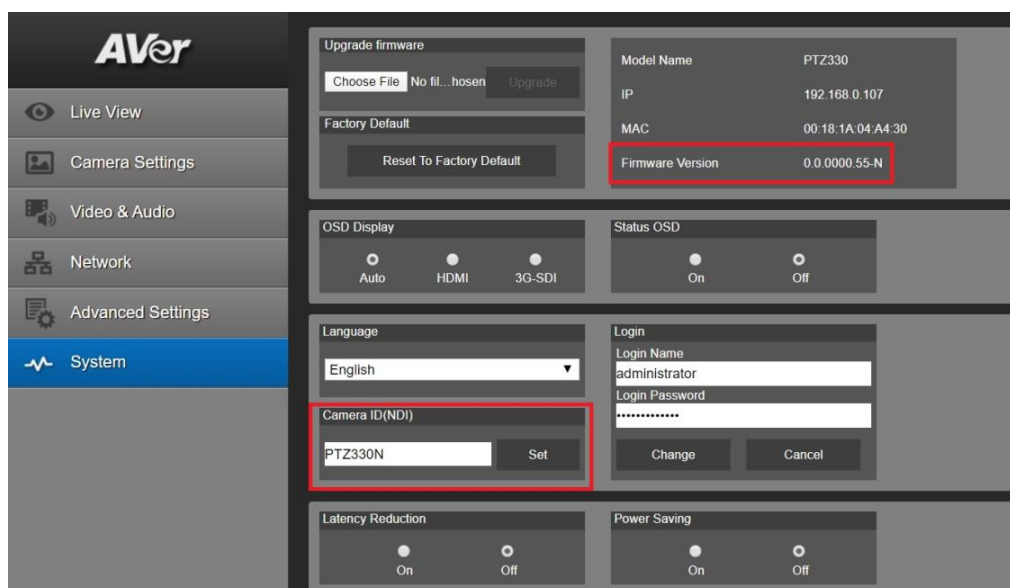

AVer PTZ310N/330N Camera Video Mode (continued)


10. The following characters can be used for the Camera ID description, there is a limit of 10 characters for the name.

Numeric characters	0123456789
Alphabetical characters (upper and lower cases)	ABCDEFGHIJKLMNOPQRSTUVWXYZ abcdefghijklmnopqrstuvwxyz
Symbols	! @ # \$ % ^ & * () , . \ ; : " ' + = < > ? [] { } - _ ` ~ \ /

NDI Audio Settings


Before connecting to the TriCaster, verify that the Audio and Video can be recorded using the NDI *Studio Monitor Tool*.

1. Using the PTZ camera Audio (In) connection, set the Audio Input Type to *Line-In*.

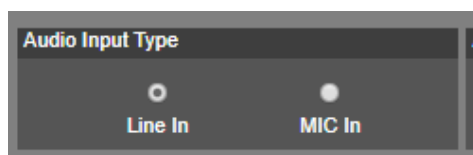


MIC-In: Use a 3 to 4 MIC-In cable to connect the camera and MIC-In device (microphone).
50mVrms (max.); supplied voltage: 2.5V
Line In: Line Input level is 1Vrms (max.)

2. Select the Audio Settings in the NDI Monitor tool to a level where audio is being captured; you may need to “tweak” the level to get a good level.
3. In the example below we needed to adjust level to +6dB (EBU Level) to get audio recorded through the NDI Monitoring tool then played through VLC Media Player (3.0.8).

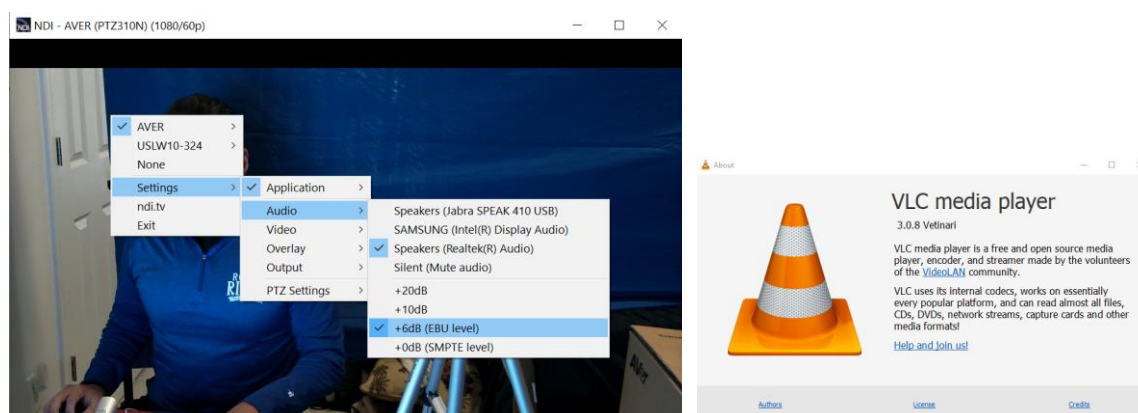


NDI Audio Settings (continued)

4. You should also see blue “Audio bars” in the lower left corner of the NDI display indicating an audio signal is being received.

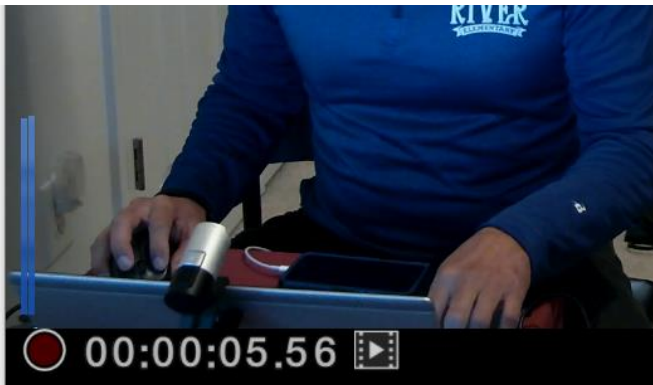

5. Next, select the red “record” circle to begin recording.



6. Next, select the red “record” circle again to end the recording.
7. Next, select the  “film” icon and will take you to the recording directly. The recorded video will be in the “C:\Users\Dave\Videos\” folder in Windows.
8. Use VLC or some other player that supports NDI.
9. This concludes the quick test to verify that Audio/Video is being recorded and played.

AVer PTZ310N/330N Camera integration with NewTek TriCaster NDI


The following are the steps captured for the TriCaster Mini NDI, but the same should be true with the other models.

The NewTek TriCaster comes in 3 different models:


- TriCaster TC1 (4K UHD)
- TriCaster T410 Plus (Rack Mount)
- TriCaster Mini (Portable Desktop).

***Note:** The TC1 and T410 do not have PoE+ connections on the back like the Mini does, this means the Network connection would happen through a switch/router that these models are on, and power would be supplied through the camera AC adaptor.

1. On the back of the TriCaster Mini there will be (4) NDI RJ-45 (PoE+) connections, locate an available port and connect to the AVer PTZ camera if not already plugged in.

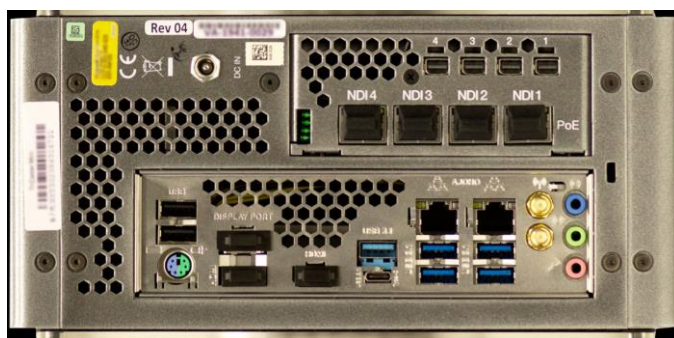

2. Next, once the camera has fully powered up go to the Mini Interface and open “Input 1”.

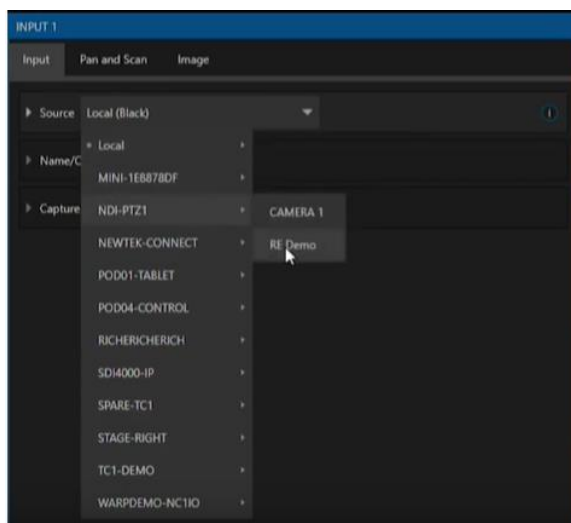


AVer PTZ310N/330N Camera integration with NewTek TriCaster NDI (continued)

3. Next, you should now be able to select the AVer PTZ camera displayed as “PTZ310N” or “PTZ330N”.
4. Next, once selected you should have video being displayed in the “*INPUT 1*” display of the TriCaster.



5. Next, select the PTZ tab to verify control of the AVer PTZ camera.

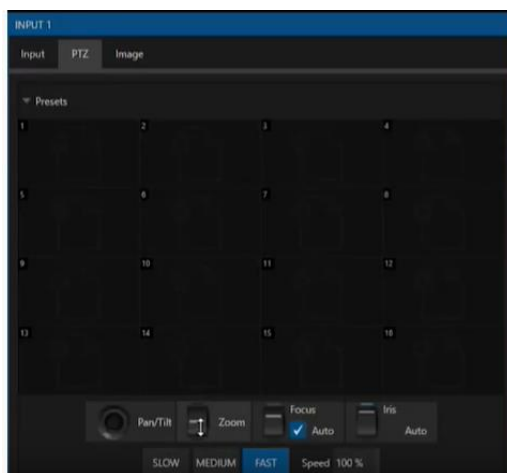

6. This concludes the AVer PTZ-NDI series camera integration with NewTek TriCaster NDI.

TR311HN and TR3xxNV2 Camera Overview

The AVer New camera series, TR311HN, TR3xxNV2 is the latest camera line with NewTek NDI® integrated support. It combines both standard SDI and HDMI connections as well as Ethernet/NDI network connectivity for HD video streaming, recording, and broadcasting.

The TR311HN/TR3xxNV2 cameras can output HD video and audio while receiving control signal and power (PoE+) over a single connection.


TR311HN

12X NDI® PTZ live streaming camera

Featuring NEW AI Auto Tracking



Package Contents

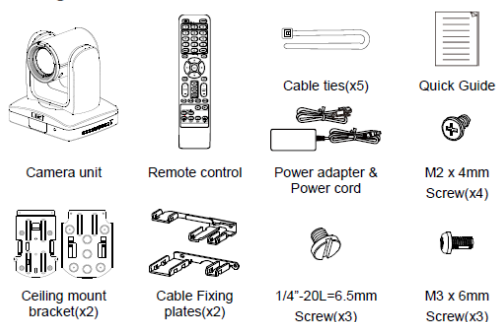

Camera	TR311HN	TR311	TR313 - 4K	TR331	TR313V2 - 4K	TR333V2 - 4K
Zoom	12X Optical, 12X digital	12X Optical, 12X digital	12X Optical, 12X digital	30X Optical, 12X digital	12X Optical, 12X digital	30X Optical, 12X digital
Max Resolution	1080@60fps	1080@60fps	2160@30fps	1080p@60fps	2160p@30fps	2160p@30fps
Outputs	IP / HDMI / USB	3G-SDI / IP/ HDMI / USB	3G-SDI / IP / HDMI / USB	3G-SDI / IP / HDMI / USB	3G-SDI / IP / HDMI / USB	3G-SDI / IP / HDMI / USB
Streaming	RTMP / RTSP SRT / NDI	RTMP / RTSP / SRT	RTMP / RTSP / SRT	RTMP / RTSP / SRT	RTMP / RTSP / SRT	RTMP / RTSP / SRT
Auto Tracking	People Tracking (half or full body), Zone Tracking, Hybrid	People Tracking (half or full body), Zone Tracking, Hybrid	People Tracking (half or full body), Zone Tracking, Hybrid	People Tracking (half or full body), Zone Tracking, Hybrid	People Tracking (half or full body), Zone Tracking, Hybrid	People Tracking (half or full body), Zone Tracking, Hybrid
PoE+	Yes	Yes	Yes	Yes	Yes	Yes
USB 3.0, Type-C	Yes	Yes	Yes	Yes	No, USB 3.0, Type-B	No, USB 3.0, Type-B
TAA Compliant	No	No	No	No	Yes	Yes
WDR & Tally Light	Yes	Yes	Yes	Yes	Yes	Yes

TR311HN and TR3xxNV2 Camera Overview

TR313V2

12X Ultra HD PTZ live streaming camera


Featuring NEW AI Auto Tracking



***Note:** TR3xxNV2 may not have an SDI output connection.

- AVer TR311HN and TR3xxNV2 Camera and accessories.

Package Contents

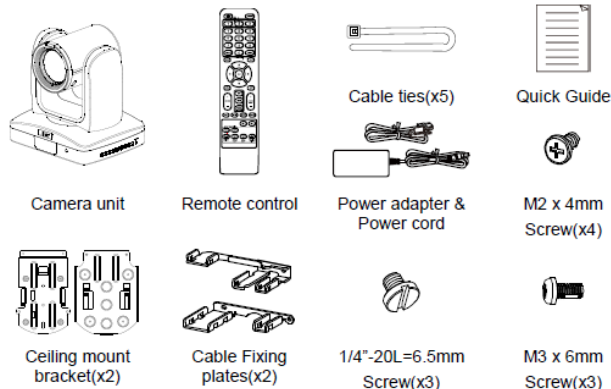

TR311HN and TR3xxNV2 Camera Video Mode

Before proceeding, we need to verify that the TR311HN/TR3xxNV2 camera is setup for NDI, if not; there will be no NDI output.

***Note:** The TR311HN/TR3xxNV2 cameras come with NDI activated from the factory but could change with future production models.

There are (2) ways to do this:

- HDMI Output of the camera
- WebUI of the camera

HDMI

1. Connect the HDMI output of the camera to a monitor and use the camera remote to enable the OSD (On Screen display), then navigate to the System→NDI→ setting and verify it is set to ON.

***Note:** The cameras from the factory come with NDI enabled, but this may change in future production models.




2. If it is set to OFF, select ON, the camera will reboot.

***Note:** When the camera is in NDI mode, the USB video output is disabled.

WebUI

11. The **Default IP** address is 192.168.1.168. You can change this using the HDMI output OSD, selecting the Network setting.
12. Use a **Chrome Browser** to access the WebUI of the camera.
13. The **Default** Username/Password is: admin / admin
14. The login credentials will need to be changed, carefully write down the NEW credentials.
15. Login to the WebUI of the camera with the NEW credentials.
16. Once logged in, go to the “*Video & Audio*” settings, verify that “*Video Mode*” has the “*NDI*” radio button selected.

***Note:** The camera will need to re-boot when changing to/from NDI video mode.

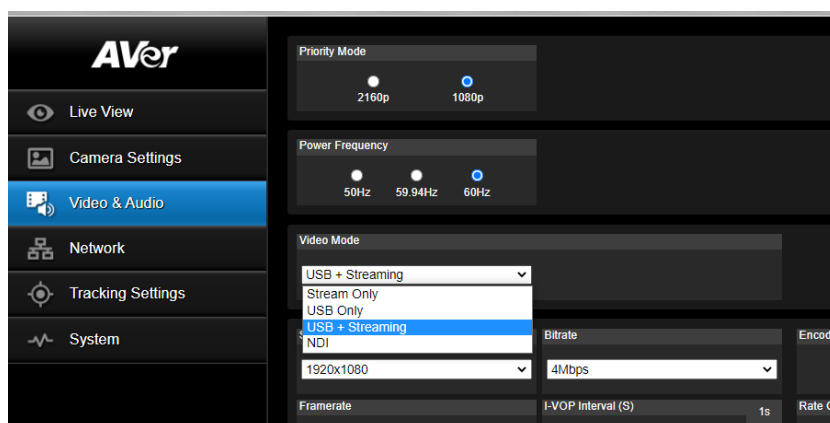


***Note:** The STREAM Video Output, Framerate, encoding type, and Sampling Rate settings are adjustable in NDI mode. The TR311HN/TR3xxNV2 cameras can be adjusted, 30fps / 60fps etc. The TR Camera will have an SDI/HDMI output in ALL modes.

Video Standard -->	Stream Only (Various)	USB Only (Various)	USB + Streaming (Various)	NDI (1080p/60)
SDI Output	✓	✓	✓	✓
HDMI Output	✓	✓	✓	✓
USB Output	✗	✓	✓	✗
RTSP Output	✓	✗	✓	✓


TR311HN and TR3xxNV2 Camera Video Mode (continued)

17. The Rate Control setting should be set to CBR, there have been better results seen using this option.

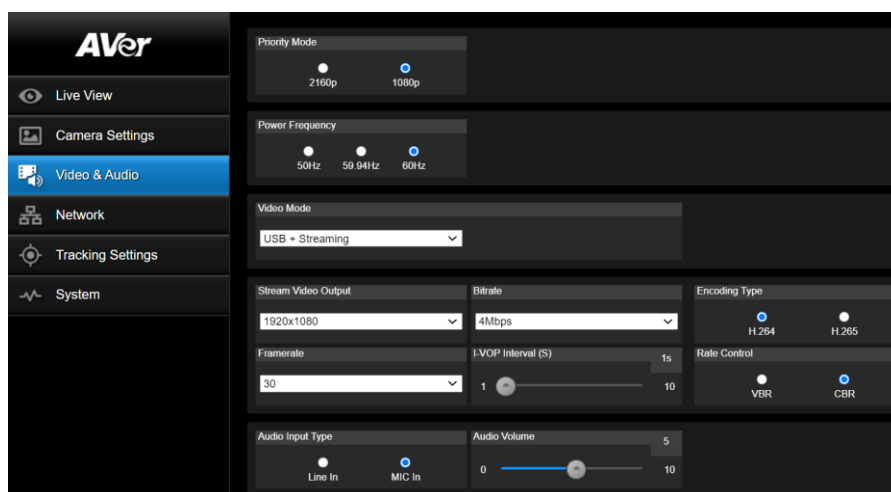

18. Setting the Bitrate to 8Mbps is also recommended, but you may see different results based on your network with other settings.

19. In the *System* page you can set the identity name *Camera ID (NDI)* for display on the NDI interface. After choosing your name press “Set” to make the change. ***Note:** A reboot of the camera is necessary for the name change. The firmware version can also be verified from the *System* page.

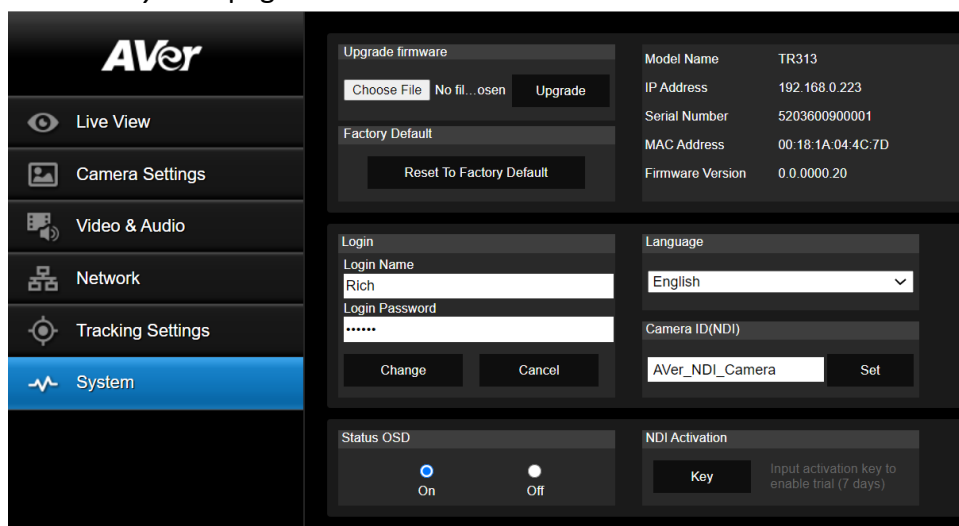


20. The following characters can be used for the Camera ID description, there is a limit of 10 characters for the name.

Numeric characters	0123456789
Alphabetical characters (upper and lower cases)	ABCDEFGHIJKLMNOPQRSTUVWXYZ <u>abcdefghijklmnopqrstuvwxyz</u>
Symbols	! @ # \$ % ^ & * () , . \ ; : ' ' + = < > ? [] { } - _ ` ~ \ /

NDI Audio Settings

Before connecting to the TriCaster, verify that the Audio and Video can be recorded using the NDI Studio Monitor Tool.


1. Using the PTZ camera Audio (In) connection, set the Audio Input Type to *Line-In*.

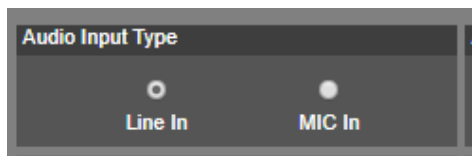


MIC-In: Use a 3 to 4 MIC-In cable to connect the camera and MIC-In device (microphone).
50mVrms (max.); supplied voltage: 2.5V

Line In: Line Input level is 1Vrms (max.)

2. Select the Audio Settings in the NDI Monitor tool to a level where audio is being captured; you may need to “tweak” the level to get a good level.
3. In the example below we needed to adjust level to +6dB (EBU Level) to get audio recorded through the NDI Monitoring tool then played through VLC Media Player (3.0.8).

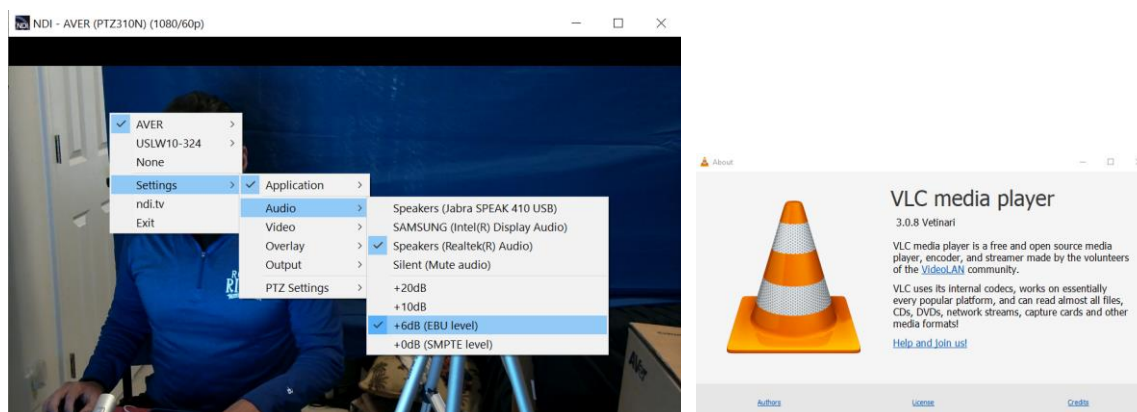


4. You should also see blue “Audio bars” in the lower left corner of the NDI display indicating an audio signal is being received.

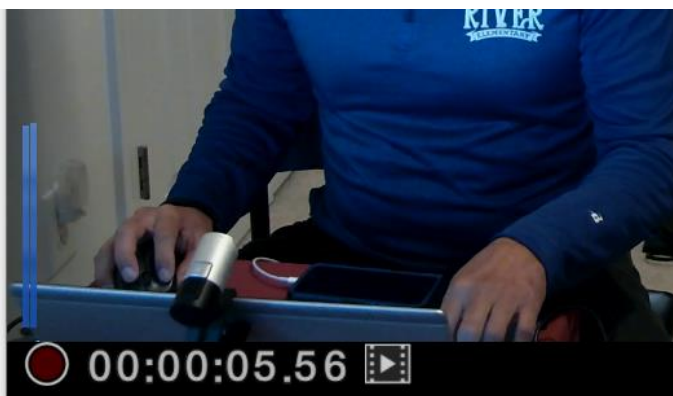

NDI Audio Settings (continued)

- Next, select the red “record” circle to begin recording.



- Next, select the red “record” circle again to end the recording.
- Next, select the  “film” icon and will take you to the recording directly. The recorded video will be in the “C:\Users\Dave\Videos\” folder in Windows.
- Use VLC or some other player that supports NDI.
- This concludes the quick test to verify that Audio/Video is being recorded and played.

TR311HN and TR3xxNV2 Camera integration with NewTek TriCaster NDI


The following are the steps captured for the TriCaster Mini NDI, but the same should be true with the other models.

The NewTek TriCaster comes in 3 different models:

- TriCaster TC1 (4K UHD)
- TriCaster T410 Plus (Rack Mount)
- TriCaster Mini (Portable Desktop).


***Note:** The TC1 and T410 do not have PoE+ connections on the back like the Mini does, this means the Network connection would happen through a switch/router that these models are on, and power would be supplied through the camera AC adaptor.

- On the back of the TriCaster Mini there will be (4) NDI RJ-45 (PoE+) connections, locate an available port and connect to the AVer TR camera if not already plugged in.

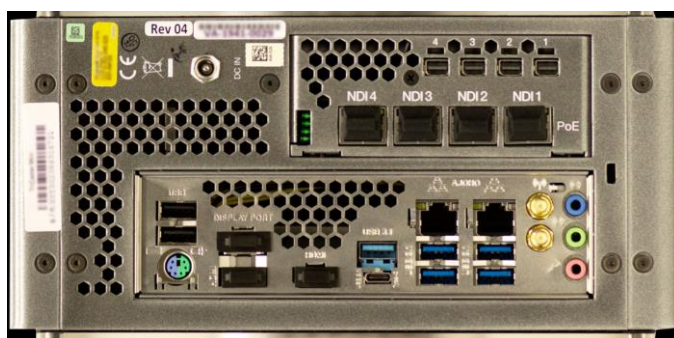

TR311HN and TR3xxNV2 Camera integration with NewTek TriCaster NDI (continued)


- Next, once the camera has fully powered up go to the Mini Interface and open “Input 1”.

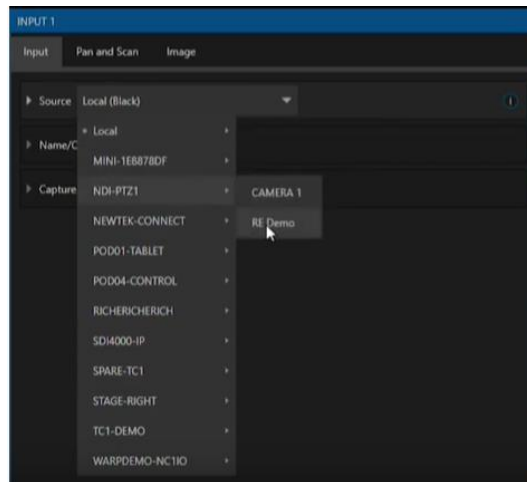

- Next, you should now be able to select the AVer TR camera displayed as “TR311HN” or “AVer_NDI_TR313”.
- Next, once selected you should have video being displayed in the “INPUT 1” display of the TriCaster.



- Next, select the PTZ tab to verify control of the AVer PTZ camera.

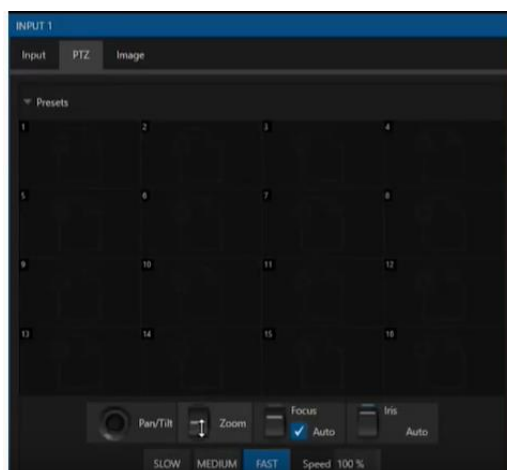

- This concludes the AVer TR-NDI series camera integration with NewTek TriCaster NDI.

Check the AVer Pro-AV Website for additional support documentation.

<https://www.averusa.com/pro-av/support/>